

THE PINSKE EDGE

012553

REPLACEMENT GASKETS FOR RIGID SEAMING CUPS

Replacement Gaskets for your Seaming Cups have an adhesive backing. This will assist in keeping them in place so that they don't fall out of the groove.

When replacing your old gaskets, remove the adhesive tape from the gasket and install them into the groove. Press the gaskets into the bottom of the groove – do not stretch the gasket. Just lay it in naturally and it will come out to the right length.

The Pinske Edge
119 Main Street, P.O. Box 68
Plato, MN 55370 USA
Fax – 320-238-2385 - Phone 320-238-2196 or 1-800-TPINSKE
www.pinske-edge.com – info@pinske-edge.com